

 


Aventurier

User Manual

— Please read carefully before using

Aventurier artist 1

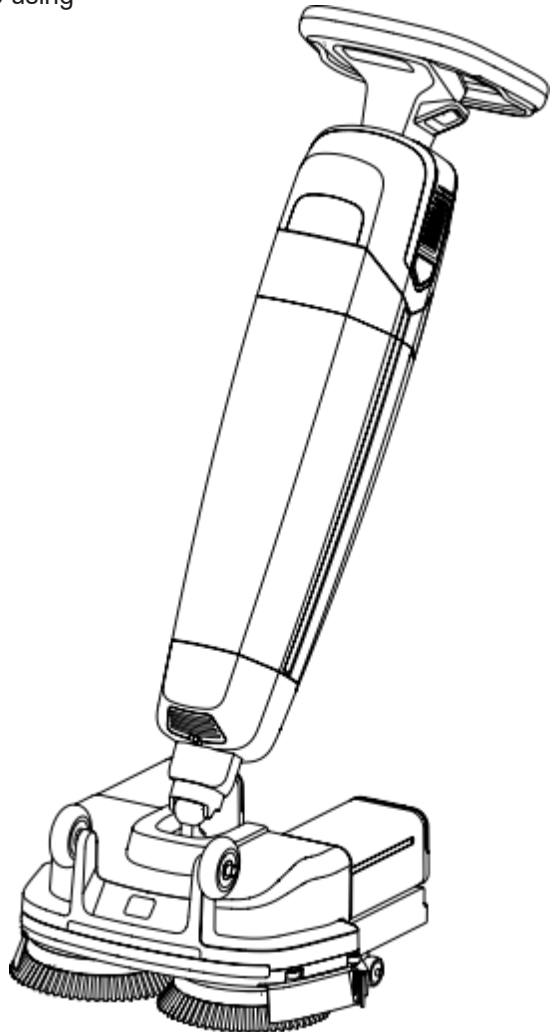

The illustrations in this manual are for reference only.
Please refer to the actual product.

Contents

Warning	2
Introduction	4
Operation Manual	7
Battery Charging	16
Maintenance	18
Troubleshooting	19
Warranty	20

Warning

SAVE THESE INSTRUCTIONS

For indoor use only

When using an electrical appliance, basic precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING. Failure to follow the warnings and instructions can result in electric shock, fire, or serious injury.

Dangers

- The product contains batteries. Do not place the product near open flames or in high-temperature environments to avoid risks.
- Use the batteries provided by Aventurier to avoid accidents.
- Recharge only with the charger provided by Aventurier. The charger may create a fire risk when used with another type of battery pack.
- Flammable materials may cause explosion or fire. Do not add flammable liquids to the water tank.
- The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge unless they have been given supervision or instruction.
- Children should be supervised to ensure they do not play with the appliance.
- Avoid using the product in hazardous areas such as gas stations, dust workshops, and other flammable and explosive environments.
- Do not use damaged or modified battery packs or appliance. Damaged or modified batteries may exhibit unpredictable behavior resulting in a risk of fire, explosion or injury.
- The power terminals must not be short-circuited.
- Exhausted batteries should be removed from the appliance and safely disposed of.

Operation Warnings

- For commercial use. Only for indoor use on hard floor; do not use on carpets.
- Use water NOT exceeding 45°C/113°F to prevent damage to the water tank and associated components.
- Avoid using cleaning agents with a pH below 6 or above 8 to prevent damage to sensitive components such as hoses and valves. It is recommended to use cleaning agents suggested by the manufacturer.
- Do not use high-pressure methods such as pressure guns to flush the product.
- Only trained personnel should operate the product.
- Avoid using the product to vacuum sharp objects such as metal nails or glass shards.
- Do not use the product to vacuum harmful substances and chemicals, such as drain cleaners, strong acids, or alkalis.
- Do not handle the charger and battery with wet hands.
- Do not operate the product if any part of the product is damaged.
- When leaving the product unattended or without supervision, turn off the product and place it against the wall.
- Avoid parking the product on ramps or slopes; place the product on a flat, hard surface.
- When moving the product, move it on a flat surface, avoiding dragging it on uneven ground to prevent damage to the product and its appearance.
- Do not step on the machine, or operate the machine violently.
- The storage temperature of the machine must be between -25°C and 50°C, and the water tank must be empty during storage.
- When not in use for a long time, remove the battery from the product and store it.

Introduction


Function Introduction

- This product (hereinafter referred to as A1) is an intelligent compact floor scrubber dryer suitable for hard floor. It integrates water spraying, scrubbing, and wastewater recycling. It can be widely used in residences, hotels, restaurants, factories, offices, and other places. Compared with the traditional mop cleaning method, it is efficient and convenient, can help customers better solve their floor cleaning needs.

Specifications

Model	Aventurier artist 1
Dimensions	1170mm*469mm*435mm
Weight	22kg
Input Voltage	100~240V
Rated Voltage	25.2V \equiv
Rated Power	380W
Operating Modes	Eco Mode / Turbo Mode / Auto Mode Sterilization Mode / Brush Only Mode
Cleaning Width	40cm
Noise Level	Minimum 60dB(A)
Battery	13Ah Lion * 2
Charging Time	100min for single battery
Usage Time	75min for single battery
Clean Water Tank Capacity	4L
Wastewater Tank Capacity	4L(Effective volume)
Smart Interaction	High-definition LCD screen display/Voice interaction
Digital Management Platform	Optional

Overview

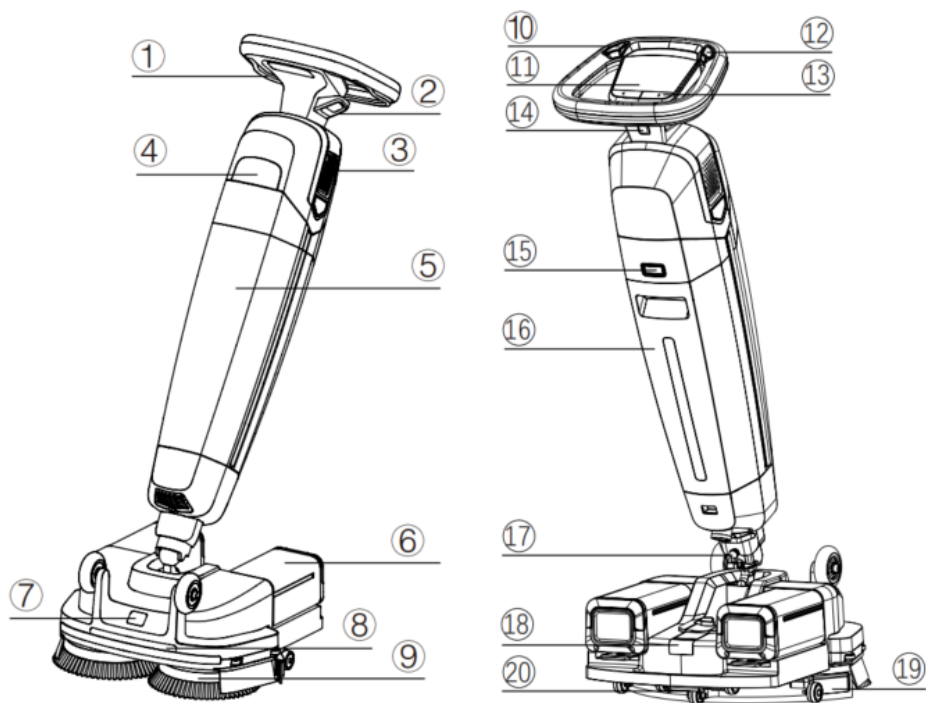

①	Starting Switch	⑪	Screen
②	Auxiliary Support Pull Ring	⑫	Power Switch
③	Voice Speaker	⑬	Mode Switch
④	Solution Tank Release Button	⑭	Volume/Wi-Fi Switch
⑤	Solution Tank	⑮	Recovery Tank Release Button
⑥	Battery	⑯	Recovery Tank
⑦	Logo Screen	⑰	Auxiliary Handle
⑧	Illumination Light	⑱	Storage Lock Button
⑨	Disk Brush	⑲	queegee
⑩	Water Spraying Switch	⑳	Scrubbing Mode Switch

Package Instructions

- When opening the packaging, please carefully check if all items inside the package are intact to avoid loss.



Package Contents			
Number	Item	Quantity	Remarks
1	A1 product	1	
2	Squeegee Assembly	1	
3	Disk Brushes	2	
4	Batteries	2	
5	Charging Base	1	
6	Charger Adapter	1	
7	Charger Cable	1	
8	User Manual	1	
9	HEPA	1	

- The configurations of different versions may be different, please refer to the actual product.
- Each product undergoes rigorous factory testing, and a small amount of moisture may remain inside the product. During transportation, this moisture may enter the packaging, causing a small amount of condensation inside the packaging bag. This is a normal phenomenon and will not affect the normal operation of the machine. Please do not worry.
- If you find any discrepancies between the product you received and your purchase invoice, or if the product is damaged during transportation, please contact the retailer or our customer service immediately.
- The packaging materials are recyclable. Please do not dispose of the packaging materials as general household waste. We recommend keeping the original packaging for extended storage, long-distance transportation, or packaging during expedited repairs.

Operation Manual

Preparing for Use: Installing Disk Brushes, Squeegee Assembly, and Batteries

- When installing or removing the disk brushes, squeegee assembly, and batteries, ensure that the product is in the upright storage position.
- To install the disk brushes, align them with the installation holes. When you hear a 'click' sound, it indicates the disk brushes are properly installed. When removing the disk brushes, grasp both ends with both hands and pull outward with force.
- When installing the squeegee assembly, align it with the left and right mounting holes, and press it in firmly, and confirm that it fits tightly. Ensure that the squeegee assembly is installed correctly. When removing, grasp both ends of the squeegee assembly with both hands and pull outward with force.

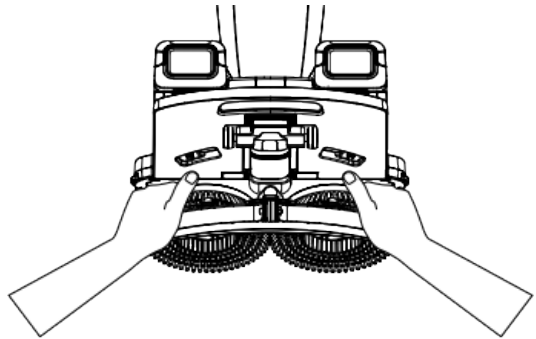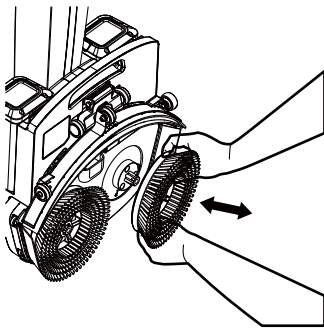


⚠ Attention:

1. Please ensure the power is turned off when removing or installing the disk brushes and squeegee assembly to prevent unnecessary personal injuries.
2. Please ensure the disk brush and squeegee assembly are installed correctly when starting the product to avoid damage to the product.

3. When installing or removing the battery, please make sure that the product is in the upright storage position, and use your hand to support the product to avoid the risk of tilting or other dangers.
4. To install the battery, push it downward along the slide rail structure. Once you hear a 'click' sound, it indicates that the battery is properly installed. When removing the battery from the main unit, support the main unit with your hand, detach the battery handle, press the battery release button, and pull upward to remove the battery.

⚠ Attention:


1. The battery contains materials that are harmful to the environment and must be removed from the appliance before it is discarded.
2. When removing the battery, the appliance must be powered off.
3. When removing or installing the battery, handle it carefully, and avoid excessive force or violent operations.
4. If battery leakage contact with skin or clothing, immediately flush with water to avoid irritation and seek medical help.

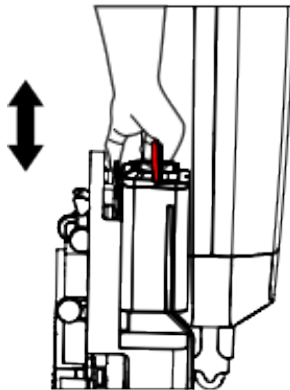


The rechargeable battery pack contains materials that should not be disposed of in landfills. Please dispose of old product and battery packs through the appropriate waste collection system.

Machine Storage and Preparation for Use

- When preparing to use the product, press the release button with your hand and slowly lower the chassis to the ground. Violent actions such as kicking or forcefully dropping the product are strictly prohibited.
- After using the machine, lift the chassis with your hand to ensure that the chassis and the body are securely locked together, and place it against the wall.

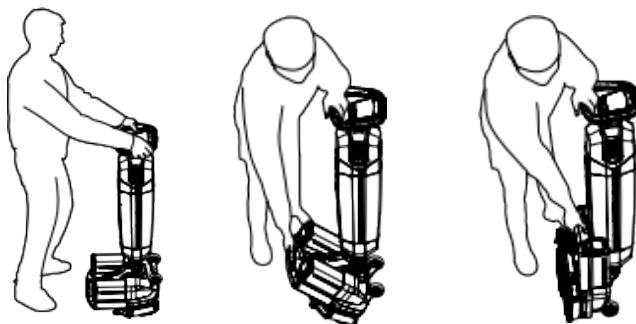


- If the product is in a supported state, please hold the support pull ring with your hand, release the support function, and lift the chassis to ensure that the chassis and the body are securely locked together. If you do not hold the support pull ring, there may be an issue with folding the chassis, and forcibly lifting the chassis may cause product damage.

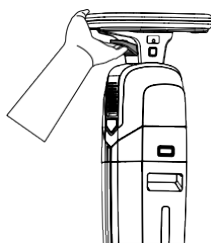


Power On/Off

- Press the Power Switch briefly to turn on the product.
- Press and hold the Power Switch for 2 seconds to turn off the product.

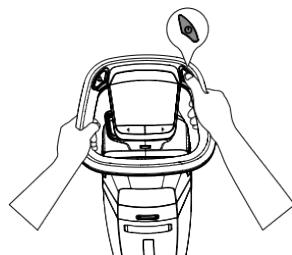

Smart Display

- Descriptions of Screen Indicators

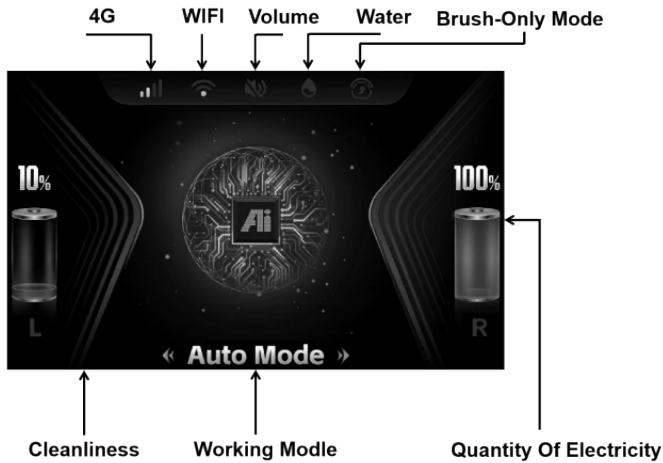


⚠ Attention:

- Do not use sharp objects to touch the screen to avoid scratching the screen.

Startup and Shutdown

- After powering on, press the Starting Switch to operate.
- When releasing the Starting Switch or encountering abnormal alerts, the product will automatically stop operating.

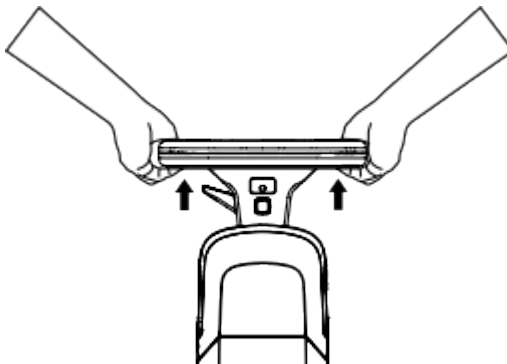

⚠ Attention:

1. Before cleaning, remove large debris or sharp objects such as nails from the floor to prevent the product from being unable to suction or getting damaged.
2. Do not place the machine on slopes or uneven surfaces during operation.
3. When operating on oil-stained floors, please be aware that slipping feet may cause the machine to lose control.


Switching Work Modes

- After powering on, the default mode is the ECO Mode.
- By using the left and right mode switch buttons, you can switch between different cleaning modes. The switching sequence is as follows: ECO Mode-Auto Mode-Turbo Mode-Sterilization Mode-Brush-Only Mode. The cleaning modes included may vary between different product versions. Please refer to the specific version features for accurate information.
- By turning on the Scrubbing Mode Switch on the chassis, the product enters the Brush-Only Mode. In this mode, it cannot be switched to other modes. To switch to another mode, you need to release the Scrubbing Mode Switch (located behind the Squeegee) , after exiting this mode, you can use Mode Switch to switch cleaning modes.

Descriptions of Different Work Modes		
Number	Work Mode	Mode Descriptions
1	ECO Mode	Daily cleaning and maintenance, long endurance of water and electricity
2	Auto Mode	Powerful cleaning for heavy dirt
3	Turbo Mode	Light wash for light dirt, heavy wash for heavy dirt, and intelligent switching
4	Sterilization Mode	Floor disinfection cleaning
5	Brush-Only Mode	Intensive scrubbing for heavy dirt, no water suction




Left Button

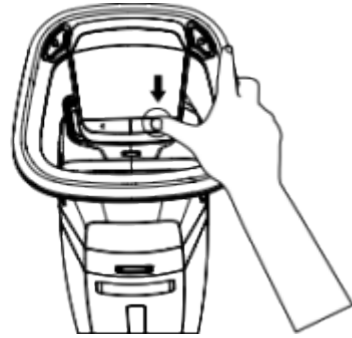

Right Button

Turn On/Off Water Spraying

- The product can manually turn on or turn off the water spraying as needed. It is initially set to on when powered on. To turn off the water spraying, press the water spraying switch. To turn on the water spraying, press the water spraying switch again.

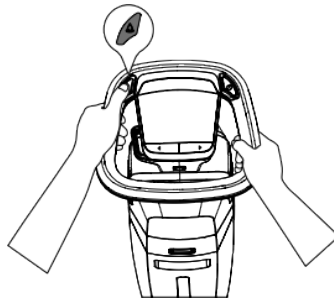


Volume Adjustment

- Pressing the Volume button briefly allows you to adjust the volume of the product's voice prompts. The adjustment sequence is as follows: Standard volume - Low volume - Mute, cycling in this order.
- The default volume when powered on for the first time is the Standard volume. Subsequent power-on default to the volume setting at the last shutdown.



Auxiliary Support

- The product features an auxiliary support function, allowing the machine to be fixed at an angle for continuous cleaning. The feature optimizes the user experience for prolonged operations.
- Adjust the angle of the support by pulling the support pull ring located on the handle. Pull down the support pull ring while the machine is in a vertical position, then release the pull ring to enter the support position. If you continuously pull the support pull ring without releasing it, you can temporarily deactivate the auxiliary support function and lift the chassis into the storage position.
- Do not forcefully steer while in the auxiliary support state to avoid damaging the machine.

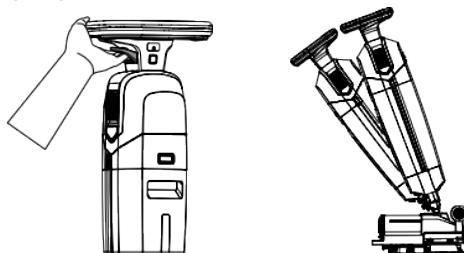


Adding Water and Draining Water

Adding Clean Water

- Press the release button on the main unit with four fingers inward, hold the handle of the clean water tank, and remove the clean water tank.
- Pour water into the clean water tank through the water inlet. The clean water tank has 2 water inlets for different operation modes. The top water inlet on the tank allows adding water while keeping the tank in an upright position, and the side water inlet allows adding water while keeping the tank in a horizontal position.
- When reinstalling the clean water tank on the main unit, align the bottom of the tank with the product's positioning hole first. Then, press the upper part of the tank into place. When you hear a 'click' sound and the release button of the clean water tank snaps back into place, it indicates that the clean water tank is properly installed. Failure to install the tank properly may cause it to fall and get damaged.

⚠ Attention:


1. Do not add water above 45°C, flammable liquids, or cleaning agents with a pH below 6 or above 8, avoid damage to the water tank.
2. It is recommended to use clean water or low-foam cleaning agents.
3. Use both hands when adding water.

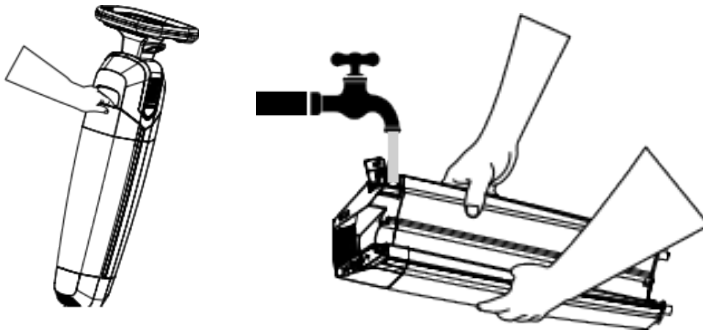

Draining Wastewater

- Grip the handle of the wastewater tank with four fingers, press the release button with your thumb, and then pull outward to remove the wastewater tank from the product.
- The wastewater tank is divided into upper and lower parts. Secure the lower part of the wastewater tank to the main body. Hold the upper cover of the wastewater tank and open it.
- Place the upper cover of the wastewater tank aside, tilt the lower part of the wastewater tank to pour out the wastewater. The sediment at the bottom or the residue on the wall of the tank can be rinsed directly with clean water.
- Rinse the upper cover of the wastewater tank with clean water, or use a cloth to wipe it clean. The HEPA is washable, but please spin or dry it before reinstalling.
- Before reinstalling the wastewater tank on the main unit, reattach the HEPA component to the upper cover of the wastewater tank. Close the upper cover and the lower part of the wastewater tank to form the wastewater tank assembly.


- When reinstalling the wastewater tank on the main unit, align the bottom of the tank with the positioning hole of the product first. Then, press the upper part of the tank into place. When you hear a 'click' sound and the wastewater tank release button snaps back into place, it indicates that the wastewater tank is properly installed. Failure to install the tank properly may cause it to fall and get damaged.

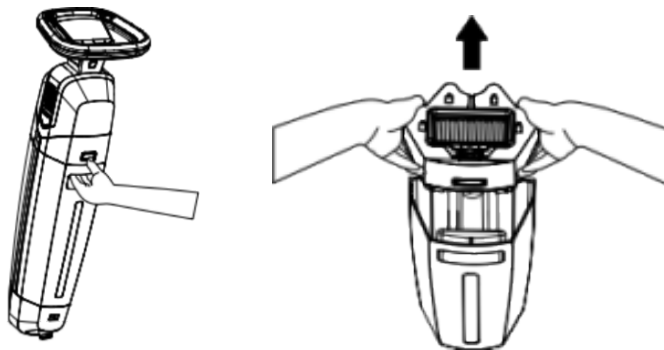

Battery Charging

Charging Operation Instructions

- After connecting the charger component to the charging base, place it on a flat, hard surface. Insert the battery into the charging base, and turn on the power switch to start charging.
- A single battery can also be charged normally.
- To disconnect the charging, simply press the Power Switch. When the indicator light goes out, it means the charging has been disconnected.

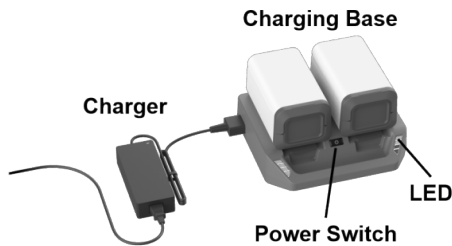

⚠ Attention:

1. Only use chargers produced or recommended by Aventurier for charging.
2. The charging environment should be a dry, clean, and well-ventilated indoor environment. Do not use it in high-temperature conditions.
3. If not used for an extended period, charge the battery fully every 3 months to maintain optimal battery performance.
4. Dispose of damaged batteries in accordance with relevant national laws, regulations, and environmental protection laws.
5. Due to the risk of short circuits, do not store the battery with metal objects; do not heat, burn, or expose it to direct sunlight; do not place it in any liquid to avoid rain or water exposure.
6. Do not disassemble, squeeze, or reverse-connect the battery. To ensure the normal use of the battery, charge it in an environment with a temperature of 5°C to 35°C.

7. Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts the eyes, immediately seek medical help. Liquid ejected from the battery may cause irritation or burns.

8. Do not expose a battery pack or appliance to fire or excessive temperature. Exposure to fire or temperature above 130°C may cause explosion.

Indicator Light Descriptions

Status	Indicator Light Descriptions
Charging	Green light flashing, constant green light when fully charged
Waiting for Charging	Red light on when battery level is low, green light on in other
Battery Abnormality	Red light on
Battery Not in Place/Power Not Connected	No light

Maintenance

- To maintain better cleaning performance and extend the product's lifespan, clean the wastewater tank, disk brush, suction squeegee, and dirty water pipe after each use, and empty the clean water tank.
- To preserve the product's appearance, avoid collisions and clean promptly in case of dirt.
- Check whether each part is installed in place before use.
- Do not wash the product directly with water.
- Store the product in a dry, clean, and well-ventilated indoor environment.
- Regularly check the disk brush and suction rubber strip. If there is obvious deformation, wear, and aging. replace or switch it to a new side immediately."

⚠ Attention:

1. To Reduce The Risk Of Injury, Power off Before Maintenance.

Recommended Maintenance Intervals		
Number	Components	Recommended Inspection Intervals
1	Clean Water Tank	After each use
2	Waste Water Tank	After each use
3	Wastewater Suction Hose	After each use
4	HEPA	After each use
5	Disk Brush	After each use
6	Squeegee	After each use
7	Splash Guard	After each use
8	Chassis	After each use

Troubleshooting

Problems	Possible Causes	Solutions
Unable to Power On	Battery not installed correctly	Check if the battery is properly installed and if the connector is dirty. Clean if necessary.
	Insufficient battery power	Charge the battery before use.
	Control board malfunction	Contact the service provider if the control board is malfunctioning.
Unable to Start Operation After Powering On	Unresolved smart alerts	Check the alert prompts on the screen and follow the instructions for inspection and resolution.
	Damaged start button	Contact the service provider if the start button is damaged.
Excessive Residual Water on the Floor	Improper installation of the wastewater tank	Ensure proper installation of the wastewater tank.
	Blockage in the dirty water suction pipe	Clear the blockage in the dirty water suction pipe.
	Worn-out suction squeegee	Replace the worn-out suction squeegee with a new one.
	Malfunctioning fan	Contact the service provider if the fan is not working correctly.
No Water Comes Out During Cleaning	Spray water switch not turned on	Turn on the spray water switch.
	Lack of water in the clean water tank	Add water to the clean water tank before use.
	Damaged internal components	Contact the service provider if internal components are damaged.
	Wear and tear on the brush disk	Replace the worn-out brush disk with a new one.
	Use of incompatible brush disk	Use a brush disk component that is compatible with the product.
Water Streaks During Cleaning	Dirt on the squeegee	Clean the squeegee component.
	Wear and tear on the squeegee rubber	Replace the worn-out squeegee rubber with a new one.
Battery Not Charging	Power switch not turned on	Turn on the charging switch button; the indicator light should illuminate.
	Battery not properly installed	Reinstall the battery properly; the status light should illuminate.
	Damage to the charging base	Contact the service provider if the charging base is damaged.

If the above troubleshooting guide fails to provide a solution, please contact the service provider directly for assistance.

Warranty

1-YEAR LIMITED WARRANTY

- Only applies to purchases made from authorized retailers of Aventurier.
- For an extended warranty period, additional services can be purchased from authorized retailers of Aventurier.

The following situations are not covered by the warranty

- Appliances purchased from an unauthorized dealer.
- Careless operation or handling, misuse, abuse, and/or lack of maintenance or use not by the User Manual.
- Use of parts not by the User Manual.
- Use of parts and accessories other than those produced or recommended by Aventurier.
- External factors unrelated to product quality and use, such as weather, modifications, accidents, electrical outages, power surges or acts of God.
- Repairs or alterations carried out by unauthorized parties or agents.
- Failure to clear blockages and other hazardous materials from the appliance.
- Reduction in battery discharge time due to battery age.

WARRANTY LIMITATIONS

- Any implied warranties relating to your appliance including but not limited to warranty of merchantability or warranty of fitness for a particular purpose, are limited to the duration of this warranty.
- Warranty coverage applies to the original owner and the original battery only and is not transferable.
- This limited warranty gives you specific legal rights. You may also have other rights which vary by region.

- Manufacturer's warranties may not apply in all situations, depending on factors such as the use of the product, where the product was purchased, or who you purchased the product from. Please review the warranty carefully, and contact the manufacturer if you have any questions

After-sales Service

- If your product has networking capabilities, we strongly recommend activating the product during purchase to enjoy enhanced services. Refer to the product manual for networking instructions. Failure to register your product won't diminish your warranty rights.
- Please keep your purchase receipt and product guarantee card to claim under our Limited Warranty.
- All after-sales services will be handled by Aventurier or its authorized agencies. Any replacement of defective parts will be owned by Aventurier.
- Service under this warranty will not extend the period of this warranty.

* The final interpretation of this card belongs to Shanghai Aventurier Technology Development Co., Ltd.

Product Guarantee Card

Dear user :

Thank you very much for choosing Aventurier artist 1. Please read and fill in the contents of this certificate carefully. Please keep this card properly so that you can obtain our service in a timely and convenient manner. A lost card will not be reissued.

Product Name		Product Model	
Product SN		Purchase Date	
Customer Name		Address	
Phone		E-mail	

This Guarantee Card certifies that the product is a qualified commodity produced by Aventurier. Under normal usage conditions, we provide users with one-year after-sales service. Please ensure proper packaging for products sent for repair. In the event of damage or loss during transportation, our company will not be held responsible.

* The final interpretation of this card belongs to Shanghai Aventurier Technology Development Co., Ltd.